


PO Box 518
620 Applegate St.
Philomath, OR 97370

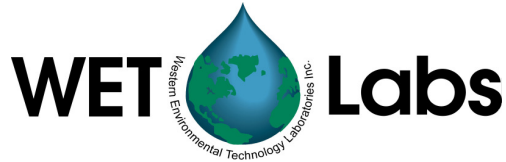

(541) 929-5650
Fax (541) 929-5277
www.wetlabs.com

Scattering Meter Calibration Sheet

7/19/2007 Customer: University of Washington SO #: 1490
Wavelength: 470 S/N#: BB2FVMG-380 Job #: 707006 Tech: k.c.

Use the following equation to obtain "scaled" output values:


$$\beta(\theta c) \text{ m}^{-1} \text{ sr}^{-1} = \text{Scale Factor} \times (\text{Output} - \text{Dark Counts})$$

- **Scale Factor for 470 nm** = 2.183E-05 (counts)
 - **Output** = meter reading (counts)
 - **Dark Counts** = 50 (counts)
- Instrument Resolution = 0.5 (counts) 1.08E-05 (m⁻¹ sr⁻¹)

Definitions:

- **Scale Factor:** Calibration scale factor, $\beta(\theta c)/\text{counts}$. Refer to User's Guide for derivation.
- **Output:** Measured signal output of the scattering meter.
- **Dark Counts:** Signal obtained by covering detector with black tape and submersing sensor in water.

Instrument Resolution: Standard deviation of 1 minute of collected data.

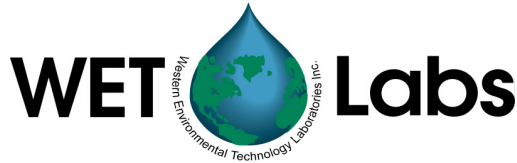

ECO Chlorophyll Fluorometer Characterization Sheet

Date: 7/19/2007

Customer: University of Washington

Job #: 707006

SO #: 1490

S/N:# BB2FVMG-380

Chlorophyll concentration expressed in $\mu\text{g/l}$ can be derived using the equation:

$$\text{CHL } (\mu\text{g/l}) = \text{Scale Factor} * (\text{Output} - \text{Dark Counts})$$

Dark Counts

49 counts

Scale Factor (SF)

0.0127 $\mu\text{g/l/count}$

Maximum Output

4122 counts

Resolution

2.0 counts

Ambient temperature during characterization

21.5 °C

Dark Counts: Signal output of the meter in clean water with black tape over detector.

SF: Determined using the following equation: $SF = x \div (\text{output} - \text{dark counts})$, where x is the concentration of the solution used during instrument characterization. SF is used to derive instrument output concentration from the raw signal output of the fluorometer.

Maximum Output: Maximum signal output the fluorometer is capable of.

Resolution: Standard deviation of 1 minute of collected data.

The relationship between fluorescence and chlorophyll-a concentrations in-situ is highly variable. The scale factor listed on this document was determined using a mono-culture of phytoplankton (*Thalassiosira weissflogii*). The population was assumed to be reasonably healthy and the concentration was determined by using the absorption method. To accurately determine chlorophyll concentration using a fluorometer, you must perform secondary measurements on the populations of interest. This is typically done using extraction-based measurement techniques on discrete samples. For additional information on determining chlorophyll concentration see "Standard Methods for the Examination of Water and Wastewater" part 10200 H, published jointly by the American Public Health Association, American Water Works Association, and the Water Environment Federation.